

## The Best Hearing Protector

Published September 10th, 2015

Alberto Behar, PEng

### THE BEST PROTECTOR IS THE ONE THAT IS WORN! (Aram Glorig 1906-98)<sup>1</sup>



Well, looks that good old Aram has answered the question. Or not? “The best is the one that is worn,” says he. Which one – since there are over 300 types among plugs, muffs and semi-inserts (without getting into the specialized models such as the active or the musician ear plugs). Did he mean the most popular? The number one in the sale list?

No, Aram wasn't wrong: the statement reads that it has to be something that the user wears all the time that he is in a noisy environment. Not because he **MUST** wear it, but, simply because it is not uncomfortable!

But, are hearing protectors uncomfortable? Hell, yes, especially if you are wearing them for a long 8 to 12-hour shift! Fair enough, no personal protective equipment is entirely comfortable. Except, probably for the safety glasses. Respirators top the list as being the worst offenders and, probably hearing protectors follow closely behind with safety shoes further down towards the bottom of the list.

Back to our hearing protectors, we are facing a paradoxical situation: we flag the hazard from noise, we provide hearing protectors (HPs), we train how to properly don and doff them. However, we still see people in noisy environments with protectors improperly donned or totally missing! That is especially true with the semi-insert protectors that some people like to have dangling around their neck, instead of inserted in their ears. In most cases, if you ask them why are they not wearing them, the answer is lack of comfort!

Two properties are of importance when dealing with HPs: *attenuation* and *comfort*. *Attenuation* is defined as "Change in hearing threshold that results when a hearing protector is worn."<sup>2</sup> There are

standard procedures for the measurement of attenuation.<sup>3</sup>



As per the same CSA Z94.<sup>2</sup> standard, the best protector is the one that reduces the noise level of the protected ear to between 75 and 80 dBA. This statement takes into account the negative effect of overprotection, something that we can discuss later in another article.


So far, so good with respect to *attenuation*.

What about *comfort*? Believe it or not, there is no definition of *comfort*. There are neither standards nor procedures for its measurement in Canada, nor in the rest of the world. The literature presents comfort factors for plugs (sizes, shapes, types/styles and ease of attaining acoustical seal) and muffs (headband tension, cushions pressure, weight, ability of the muff to cover the ears and cushion characteristics). Depending of the environment (temperature and humidity) and the tasks a worker is performing, one may prefer a plug or a muff. Compatibility with other protective equipment is another “must.” So, there are guidelines of what to take into account when dealing with this issue, but that is all.

So, the simple answer to the question in this article’s title is that there is nothing like a “best” hearing protector. As a matter of fact, if there was one, then all manufacturers will be making it and we will not have the variety we are observing in the market today.

Just going over the products that are available, protectors can be divided into the four types shown in Figure 1 and Table 1. Then, each type has different families according to make, shape, etc. And that applies to only the so called “conventional” protectors.

**Figure 1. HEARING PROTECTORS**

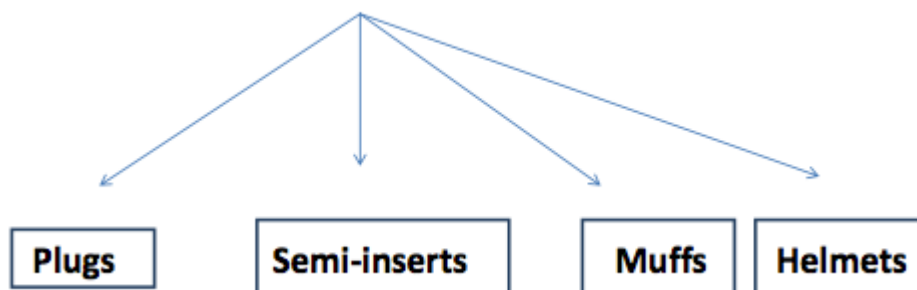

<b>Table 1. Conventional hearing protectors*</b>		
<b>Earplugs</b>	Foam	
	Push to fit	
	Premoulded	
	Formable	
	Custom-moulded	Moulded in place
		Laboratory manufactured
<b>Semi-inserts</b>	Semi-insert	
	Semi-aural	
<b>Earmuffs</b>	Earmuffs	
	Cap-mounted muffs	
<b>Helmets</b>		

To make it even more complex, we have another branch known as Specialized hearing protectors, shown in Table 2. Those are devices developed to satisfy particular needs.

<b>Table 2. Specialized hearing protectors*</b>	
<b>Active</b>	Noise attenuating communication headsets
	HPDs with direct music input
	Active noise reduction (ANR)
	Sound restoration devices
<b>Passive</b>	Flat or uniform attenuation
	Frequency-sensitive
	Adjustable-attenuation
	Amplitude-sensitive

It is not the intention in this article to explain each of the above but it is something we will certainly do in a future issue of *Canadian Audiologist*.

## Footnotes

1. Aram Glorig, was a leading expert and a mentor on the effects of noise in the workplace whose work helped untold numbers of people with deafness or hearing loss. His career as a forensic and industrial ear specialist spanned nearly 60 years. Among others, he helped setting standards for noise levels on the job. He also helped apply accreditation standards for the National Association of Hearing and Speech Agencies in the USA and helped develop international standards for calibrating hearing-testing equipment.
2. CSA Standard Z94.2-14 Hearing protection devices. (Dec 2014)
3. In most instances, the result of the measurement is expressed as Noise Reduction Rating (NRR) that ranges between 10 and 30 dB. In theory, when subtracted from the ambient sound level measured in dBC, it results in the sound level of the protected ear in dBA. For example, if the ambient level is 95 dBC and the worker is wearing a plug with nominal NRR = 25, the noise level in his ear will be  $95 - 25 = 70$  dBA. It is a comon knowledge that the nominal NRR is too

optimistic. That is why NIOSH recommends to reduce it to Aram Gorig, was a leading expert and a mentor on the effects of noise in the workplace whose work helped untold numbers of people with deafness or hearing loss. His career as a forensic and industrial ear specialist spanned nearly 60 years. Among others, he helped setting standards for noise levels on the job. He also helped apply accreditation standards for the National Association of Hearing and Speech Agencies in the USA and helped develop international standards for calibrating hearing-testing equipment.